


# IMPORTANT


Pay close attention to the end of line DIP switch settings in the diagram and make sure you match them in the installation.

All monitors are home runs to the 692D Distributors  
The Dip switches should be set to:

**"1 ON and 1 OFF" (Twisted AWG 18)"**

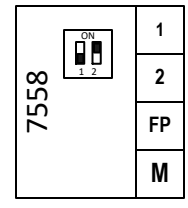


**"Both ON" (Cat5/6)**

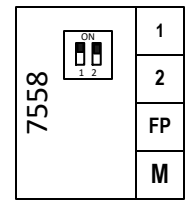


# IMPORTANT

Pay close attention to the end of line jumper settings in the diagram and make sure you match them in the installation.





All in line 692D should have the T OUT jumper **"Removed"**.

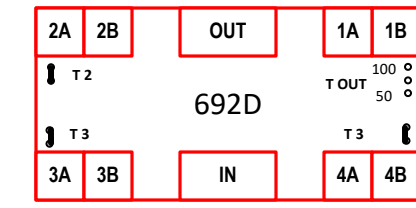

End of the riser 692D should have the T OUT Jumper in **"100" (Twisted AWG 18)**  
**"50" (Cat5/6)**

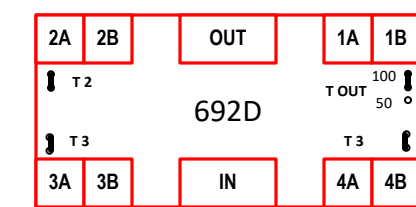

When an apartment station is connected to output 2, 3 and/or 4  
**Remove Jumpers T2, T3, and/or T4**

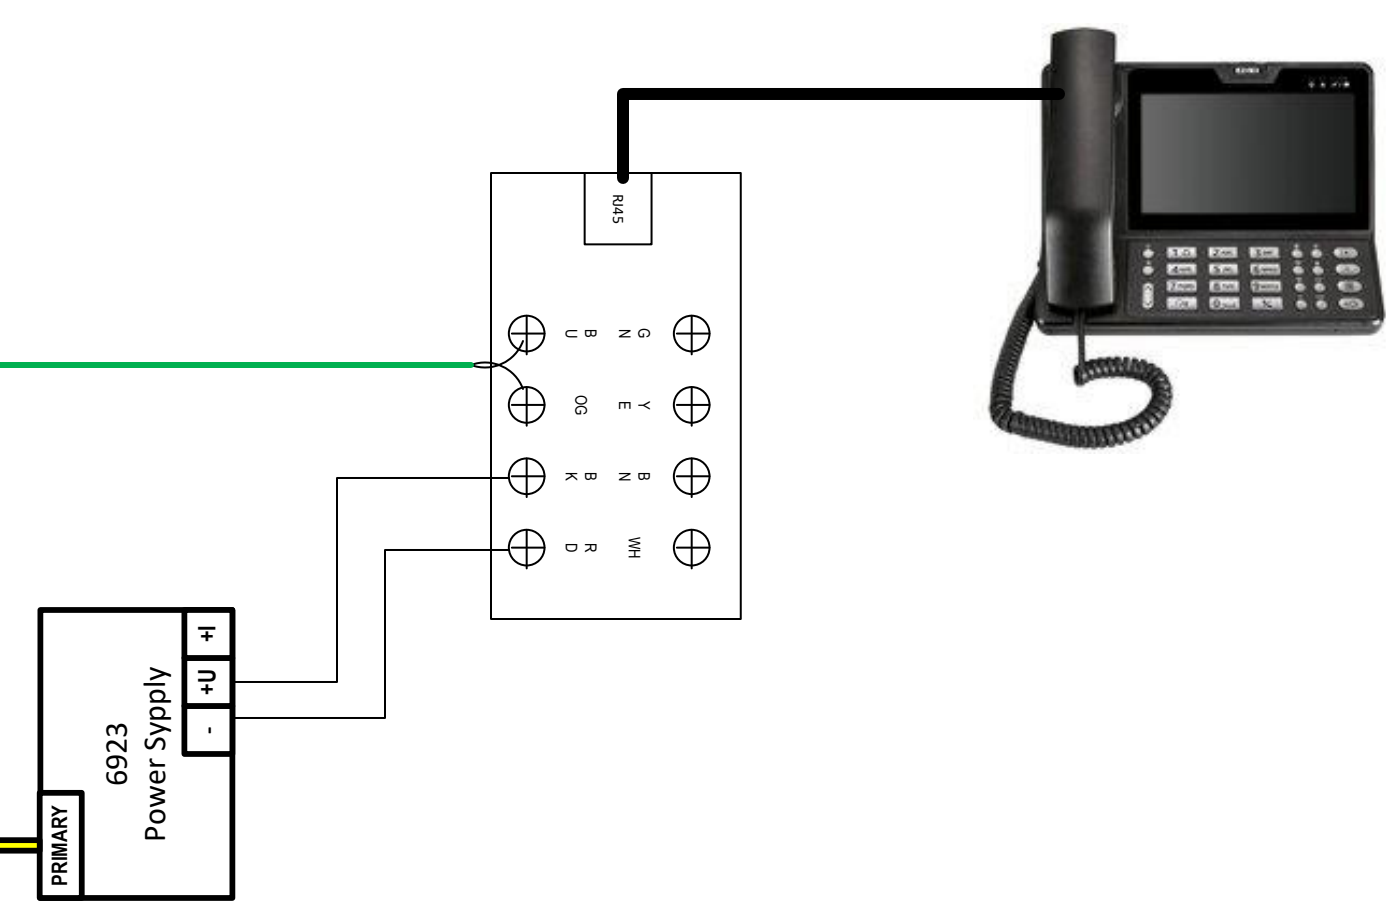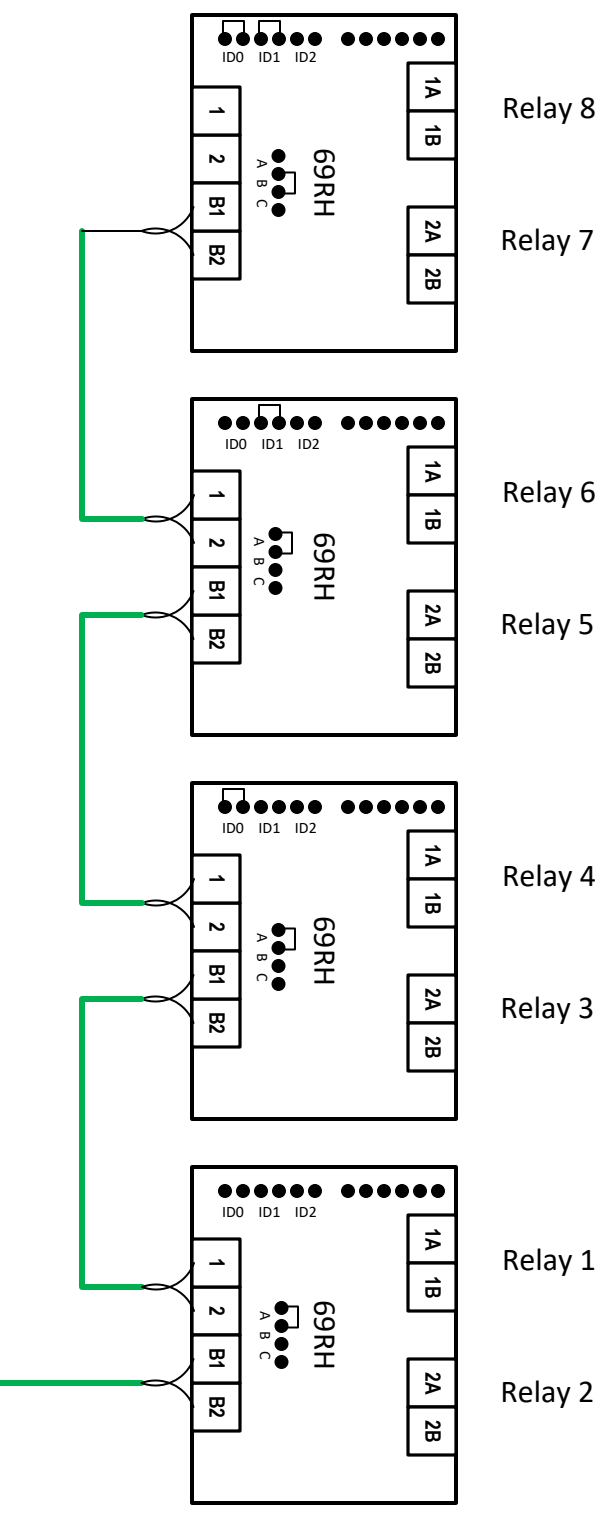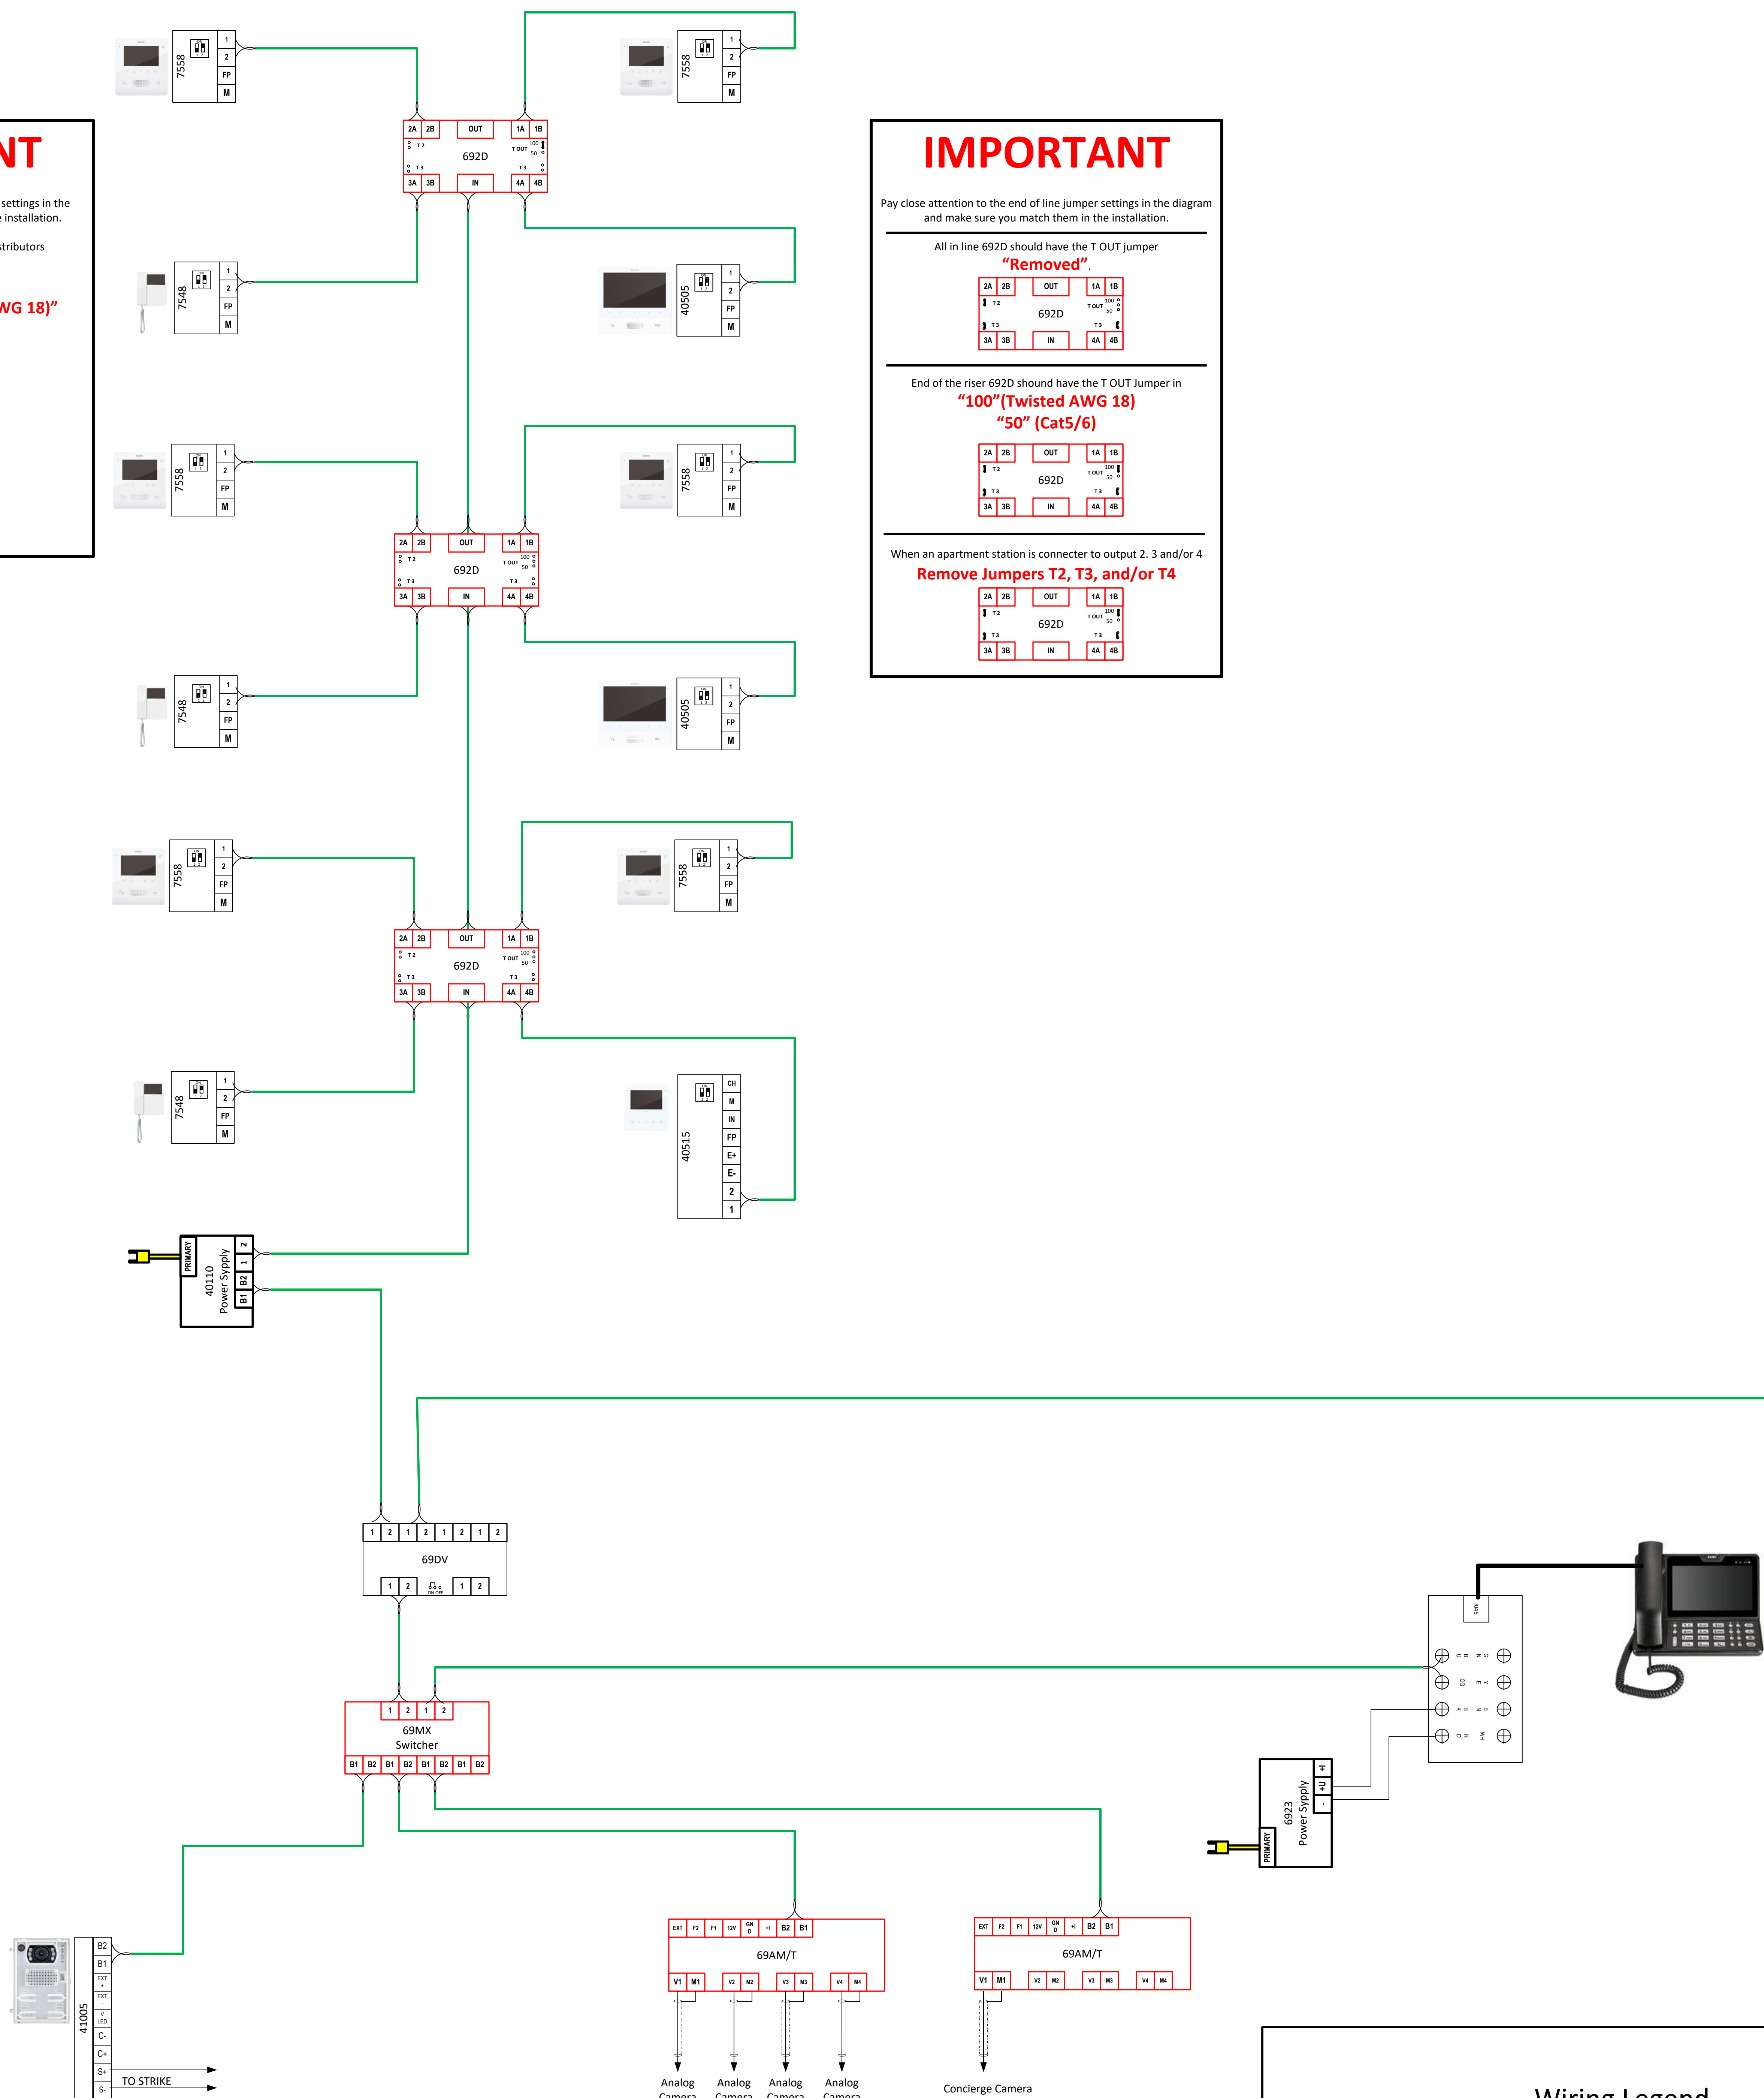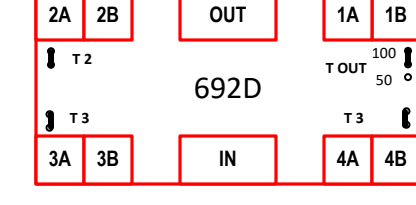

### Wiring Legend

Cat5-Cat6 wiring

Twisted Pair AWG 18 or Cat5/6

2C AWG 16

**EDVAX DOOR ENTRY**

Video 1 Entry - 1 Concierge 8 Relay 4 Aux Camera Central Riser system.vsd